

Using the wand to create professional curls

- Remove the wand from its heat resistant guard by gripping the cover and pulling to release
- Ensure that you wear the protective glove provided on the hand you will use to wind your hair around the wand
- Plug into the mains power and turn on by pressing and holding the power button once
- The power indicator will flash and then remain green once the **LOW** temperature is reached
- To select the **MID** or **HIGH** temperatures, press the power switch again until the selected temperature flashes. The indicator will remain green once the temperature is reached. You can now begin styling your hair.
- Always use the wand on clean, dry hair
- Should you require a higher or lower temperature during styling, press the power button again until the selected temperature flashes and remains green. Allow time for the wand to cool sufficiently
- Once you have finished styling, turn the power off by pressing the power button for two seconds until the green indicator light has gone off and unplug from the mains power supply.
- After use, replace the wand into its heat resistant guard
- Never wrap the cord around the wand
- Your Cloud Nine[®] wand is supplied with a standard two pin Europlug which has been fitted with a UK 3 pin adaptor. To use your Wand in a country outside of the UK, simply remove the screw that is positioned between the 3 pins and remove the adaptor from the 2 pin plug.

Also by Cloud Nine:

The Cloud Nine[®] Iron
Smooth, flick, curl or straighten, create perfect straight and sleek styles

The Cloud Nine[®] Micro Iron
Elegant and compact, perfect for travels or shorter styles

The O by Cloud Nine[®]
Create volume, body and movement, with the ultimate heated roller system


CLOUD NINE[®]

UNIL C9 LTD
PO BOX 302, ILKLEY, LS29 1ET, UK

www.cloudninehair.com

P- W QSL UK

UK

Инструкция по эксплуатации стайлера для накрутки (плойки) Cloud Nine Wand
Интернет-магазин «Плойка.Ру». www.ploika.ru


CLOUD NINE[®]
Style Infinity

The Wand - Sculpt beautiful and professional curls

Quick start
and safety
guide

Using the wand to create professional curls

- Remove the wand from its heat resistant guard by gripping the cover and pulling to release
- Ensure that you wear the protective glove provided on the hand you will use to wind your hair around the wand
- Plug into the mains power and turn on by pressing and holding the power button once
- The power indicator will flash and then remain green once the LOW temperature is reached
- To select the MID or HIGH temperatures, press the power switch again until the selected temperature flashes. The indicator will remain green once the temperature is reached. You can now begin styling your hair.
- Always use the wand on clean, dry hair
- Should you require a higher or lower temperature during styling, press the power button again until the selected temperature flashes and remains green. Allow time for the wand to cool sufficiently
- Once you have finished styling, turn the power off by pressing the power button for two seconds until the green indicator light has gone off and unplug from the mains power supply.
- After use, replace the wand into its heat resistant guard
- Never wrap the cord around the wand
- Your Cloud Nine® wand is supplied with a standard two pin Europlug which has been fitted with a UK 3 pin adaptor. To use your Wand in a country outside of the UK, simply remove the screw that is positioned between the 3 pins and remove the adaptor from the 2 pin plug.

The wand product features & warranty information

This product comes with a 12 month manufacturers warranty. In order to qualify for your 12 month manufacturers warranty you must activate it by registering your product on line at www.cloudninehair.com within 14 days from date of purchase. This does not affect your consumer rights.

Please read this section carefully before you use your new styling product. For full product information, styling hints, tips and to register your product or for helpdesk information, visit www.cloudninehair.com.

- 1 - Heat resistant guard
- 2 - Temperature indicator
- 3 - Power switch
- 4 - Ceramic barrel



The wand product safety

Don't use your styling product near water.

Don't contaminate any part of your product with any chemical, hair colour or dye.

Don't use on wet hair.

If the wand is damaged in any way it must be repaired or replaced by our service centre or it's agent, do not use it, instead go to our website for help desk contact details.

Always unplug from the mains supply immediately after use.

Clean your product by gently wiping with a damp lint free cloth, do not use sprays or detergents.

Never immerse your product in water and always switch off and unplug from the mains power supply before cleaning.

General wand safety

Your wand can get incredibly hot so you really must be careful when using it.

Do not touch the wand barrel when it is switched on.

Keep hairsprays and styling aids at a safe distance away from your wand.

Always wear the protective glove when using your wand on the hand which you use to wind the hair around the barrel of the wand.

Safety features

Hibernation mode - The intelligent sleep technology within the wand will automatically work when it has been switched on but not used for a period of 30 minutes. Once in hibernation mode you'll notice that the temperature panel will occasionally flash a green light to remind you. However during this mode the wand will cool down. When you're ready to use your wand again simply switch it off and back on again.

Voltage

The Cloud Nine® Wand can be operated with a mains voltage ranging from 100-240 Volts ac 50/60Hz, 60w.

Operation Failure

If your styling product fails to work please follow this guide:

Check that your product and the power supply are switched on.

If your product, cable or plug become damaged in any way stop using it immediately and return your product to our service centre or it's agent for repair.

Under no circumstances should you or anyone else tamper with the product as this will invalidate your warranty.

Remember

It's important that you never use your styling product for anything other than styling hair as directed in the quick start guide. Your product has been specifically designed for this purpose and using the product for any other purpose could be dangerous.

User Advice

Please remember to keep your original proof of purchase in a safe place. This product benefits from a 12 month warranty, subject to terms and conditions.

This appliance can be used by persons aged from 16 years and above. If persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge use this product, an adult responsible for their safety must ensure that they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, or it's service agent in order to avoid a hazard.

Model No. C9-WD1.0



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Also by Cloud Nine:

The Cloud Nine® Iron

Smooth, flick, curl or straighten, create perfect straight and sleek styles

The Cloud Nine® Micro Iron

Elegant and compact, perfect for travels or shorter styles

The O by Cloud Nine®

Create volume, body and movement, with the ultimate heated roller system



CLOUD NINE®

UNIL C9 LTD
PO BOX 302, ILKLEY, LS29 1ET, UK

www.cloudninehair.com